



Hyundai Elantra GT (with factory navigation) 2013-2015

KIT FEATURES

- ISO DIN radio provision with pocket
- ISO DDIN radio provision
- Painted gloss black to match the factory finish

KIT COMPONENTS

- A) Radio trim panel • B) Radio brackets • C) Pocket • D) (8) #8 x 3/8" Phillips screws

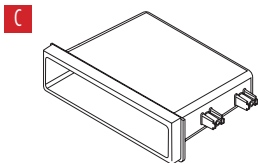
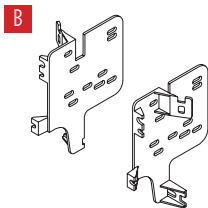
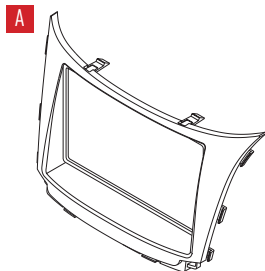


TABLE OF CONTENTS

Dash Disassembly	2
Kit Assembly	
–ISO DIN radio provision with pocket	3
–ISO DDIN radio provision.....	3

WIRING & ANTENNA CONNECTIONS (sold separately)

Wiring Harness: 70-7304

- Visit metraonline.com for premium options
- Antenna Adapter: Not required

TOOLS REQUIRED


- Panel removal tool • Phillips screwdriver
- Socket wrench

CAUTION! All accessories, switches, climate controls panels, and especially air bag indicator lights must be connected before cycling the ignition. Also, do not remove the factory radio with the key in the on position, or while the vehicle is running.


DASH DISASSEMBLY

1. Unsnap and remove the vent panels from either side of the radio down to the shifter base. (Figure A)
2. Remove the (4) screws and remove the radio. (Figure B)

Continue to Kit Assembly

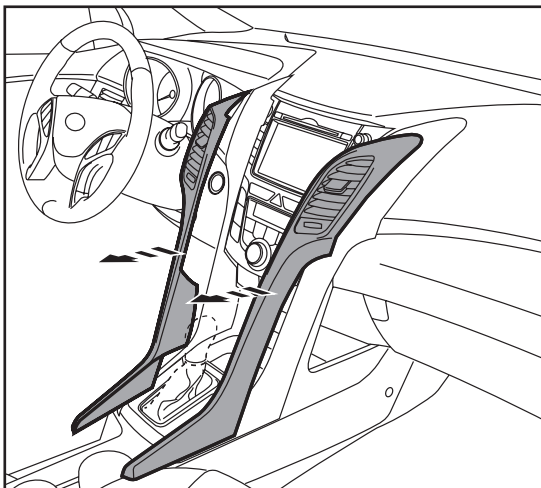

(Figure A)

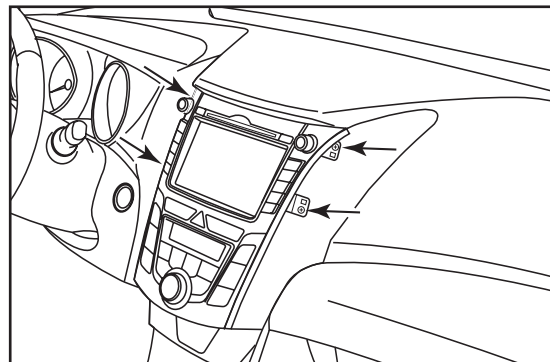


(Figure B)


KIT ASSEMBLY

ISO DIN radio provision with pocket


1. Attach the *radio brackets* to the *radio housing trim panel* with (4) #8 x 3/8" Phillips screws supplied (Figure A)
2. Mount the *pocket* to the bracket/panel assembly with (4) #8 x 3/8" Phillips screws supplied. (Figure B)
3. Remove the metal DIN sleeve and trim ring from the aftermarket radio.
4. Slide the radio into the assembly and secure with screws supplied with the radio. (Figure C)
5. Locate the factory wiring harness and antenna connector in the dash, and complete all necessary connections to the radio. Metra recommends using the proper mating adapter from Metra and/or AXCESS. Test the radio for proper operation.
6. Mount the new radio assembly into the dash and reassemble the dash in reverse order of disassembly.

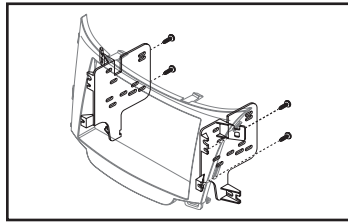

(Figure A)

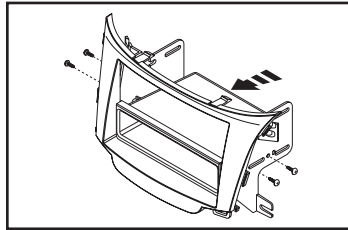


(Figure B)

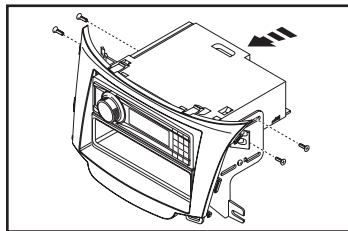


(Figure C)

ISO DDIN radio provision

1. Attach the *radio brackets* to the *radio housing trim panel* with (4) #8 x 3/8" Phillips screws supplied (Figure A)
2. Slide the radio into the assembly and secure with screws supplied with the radio. (Figure B)
3. Locate the factory wiring harness and antenna connector in the dash, and complete all necessary connections to the radio. Metra recommends using the proper mating adapter from Metra and/or AXCESS. Test the radio for proper operation.
4. Mount the new radio assembly into the dash and reassemble the dash in reverse order of disassembly.

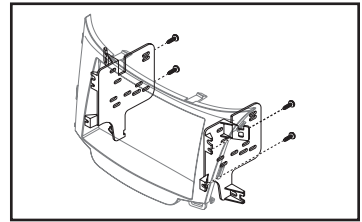

(Figure A)

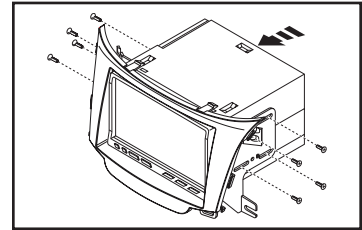

(Figure B)



99-7379HG
INSTALLATION INSTRUCTIONS



IMPORTANT

If you are having difficulties with the installation of this product, please call our Tech Support line at 1-800-253-TECH. Before doing so, look over the instructions a second time, and make sure the installation was performed exactly as the instructions are stated. Please have the vehicle apart and ready to perform troubleshooting steps before calling.



KNOWLEDGE IS POWER

Enhance your installation and fabrication skills by enrolling in the most recognized and respected mobile electronics school in our industry. Log onto www.installerinstitute.com or call 800-354-6782 for more information and take steps toward a better tomorrow.



Metra recommends MECP certified technicians